







AVA-3 **Liquid Level Monitoring System** INSTALLATION INSTRUCTIONS

Remove unit cover where float switch will be installed. Remove the 1/2" PVC elbow fitting affixed to the junction box.

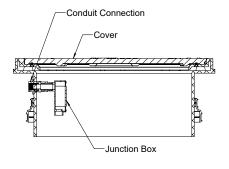


- 2 Cut the length of 1/2" PVC referenced in the table to be used as the extension pipe.
 - If unit will be buried with an adjusted adapter or riser extensions, add the amount the height was adjusted to ensure correct placement of float switch.

Table Length + Adjusted Height = Total length of 1/2" **PVC Extension**

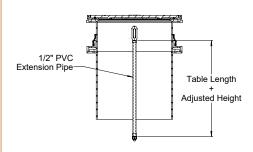


| UNIT | 1/2" PVC LENGTH |
|---------|-----------------|
| OCT-50 | 11" |
| OCT-125 | 14" |
| OCT-275 | 16" |
| BB-275 | |
| BB-500 | 25.5" |
| BB-750 | |
| BB-1500 | 27" |
| BB-1500 | 28" |
| BB-2000 | |

- Thread the male end of the float switch onto the 1/2" female end of the elbow.
 - Glue the adapter to the extension pipe, and the extension pipe to the junction box.

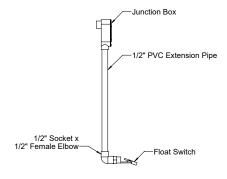

- Run float switch wiring through the extension pipe and the bottom of the junction box.
 - Run control panel wiring through exterior conduit (by others) and tie together.
 - Installation is complete.

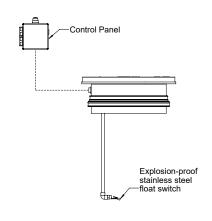











CUSTOMER SERVICE HOURS: Mon-Fri, 8 am - 5 pm CST