
- 7.
- (see page 2).

- 1.
- maintenance.


ENGINEER SPECIFICATION GUIDE


Striem oil separator model OT-1500-SS shall be lifetime guaranteed and made in the USA. Separator shall be constructed of polyethylene with 7/8" nominal wall thickness. Separator shall be manufactured for below-grade installation. Field-adjustable riser system is available as an option to bring manhole covers to grade. Separator flow rate shall be 314 GPM. Separator liquid holding capacity shall be 1500 gallons and oil capacity shall be 488 gallons. Solids capacity shall be 825 gallons. Covers shall be H20 rated pickable cast iron. Separator shall be certified to IAPMO IGC 183-2016 and carry a UPC listing.

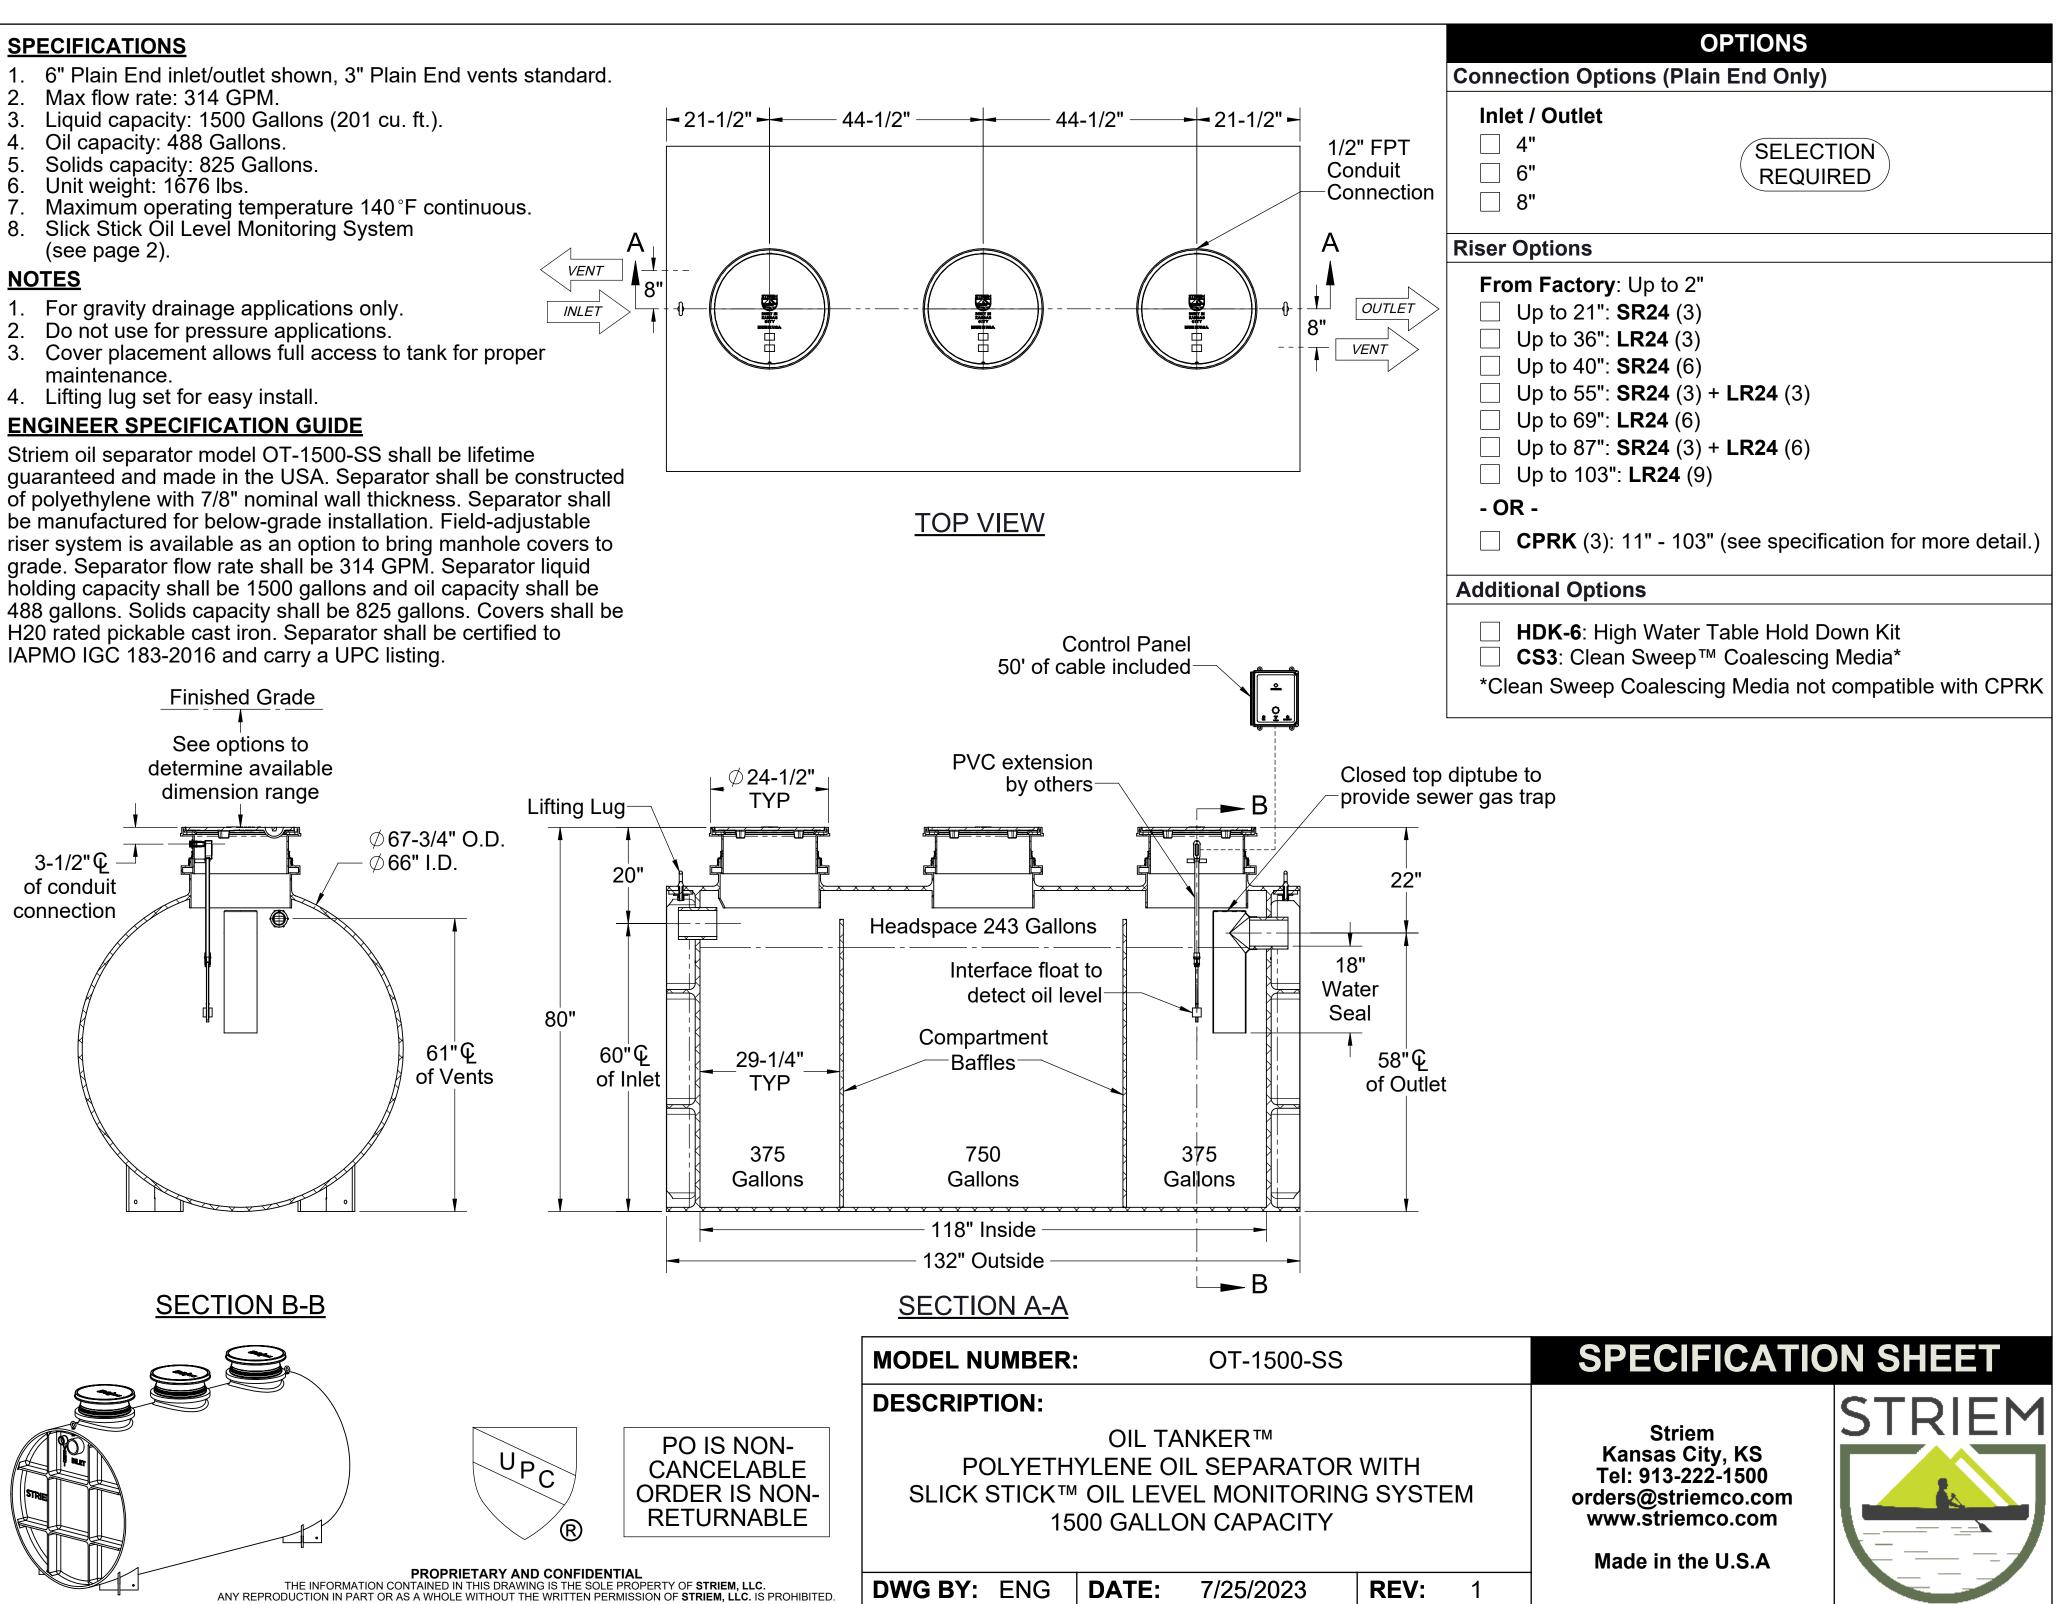



SPECIFICATIONS

- power is on.

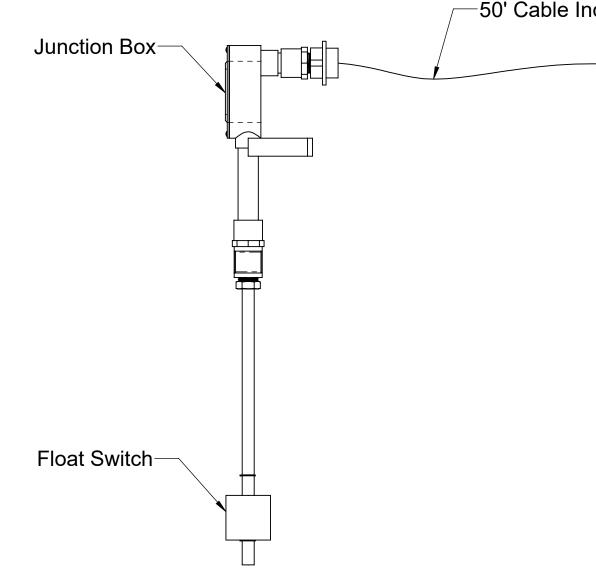

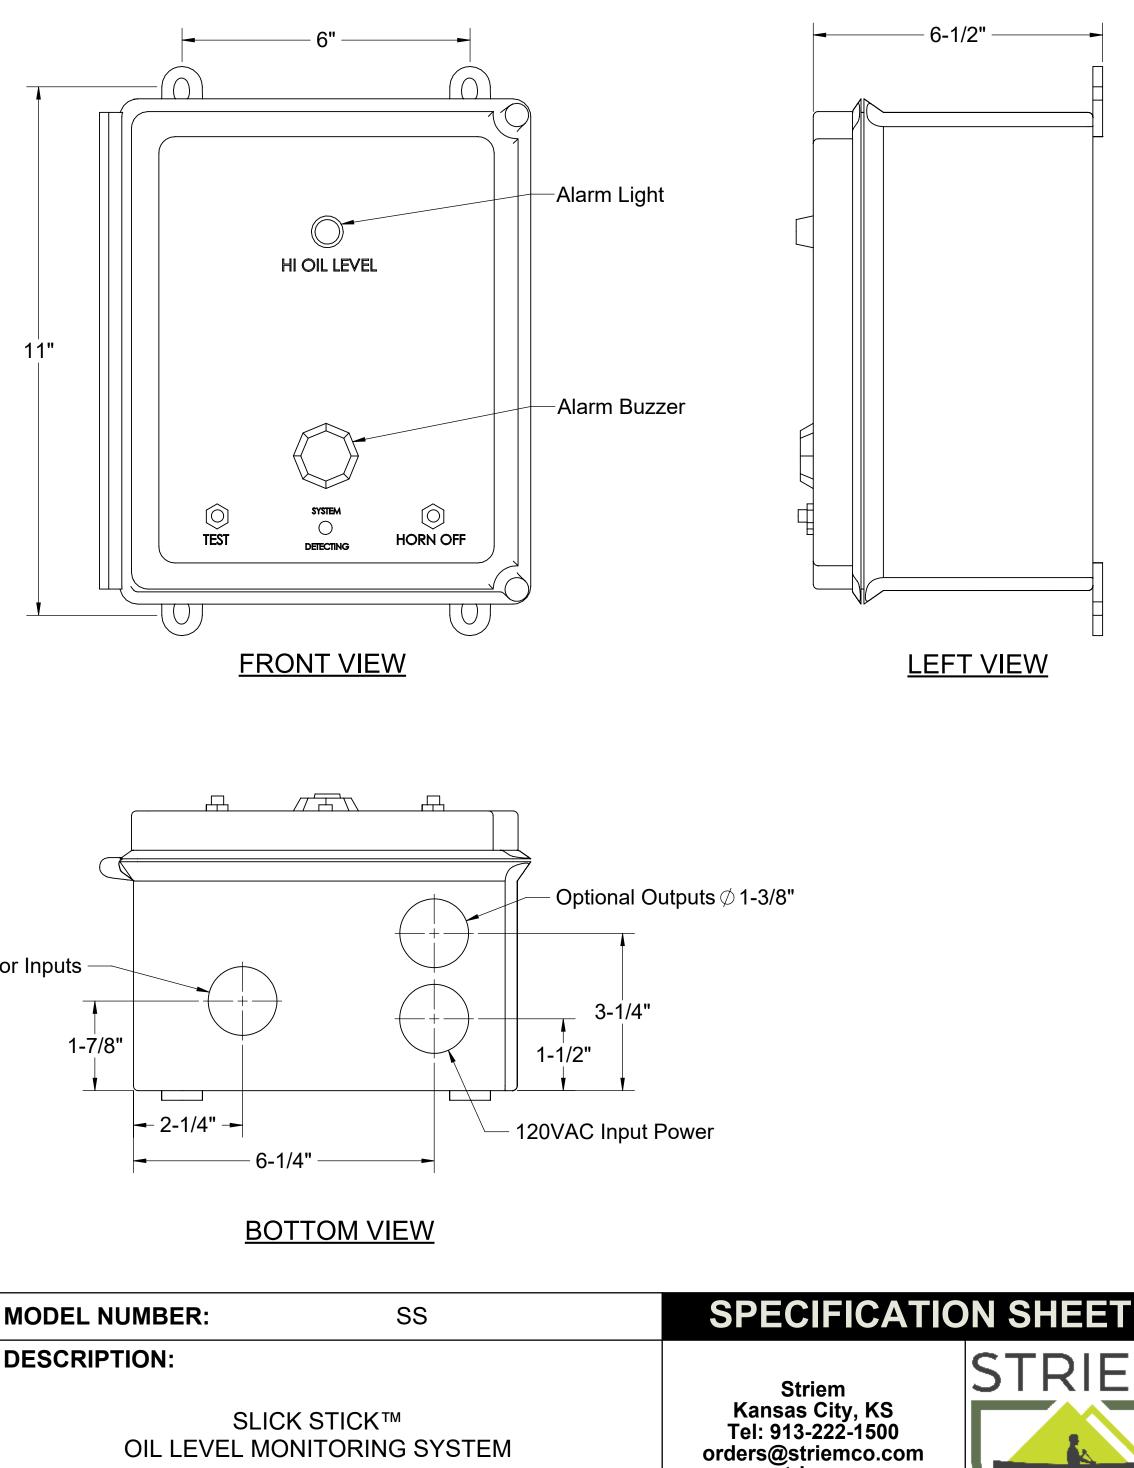

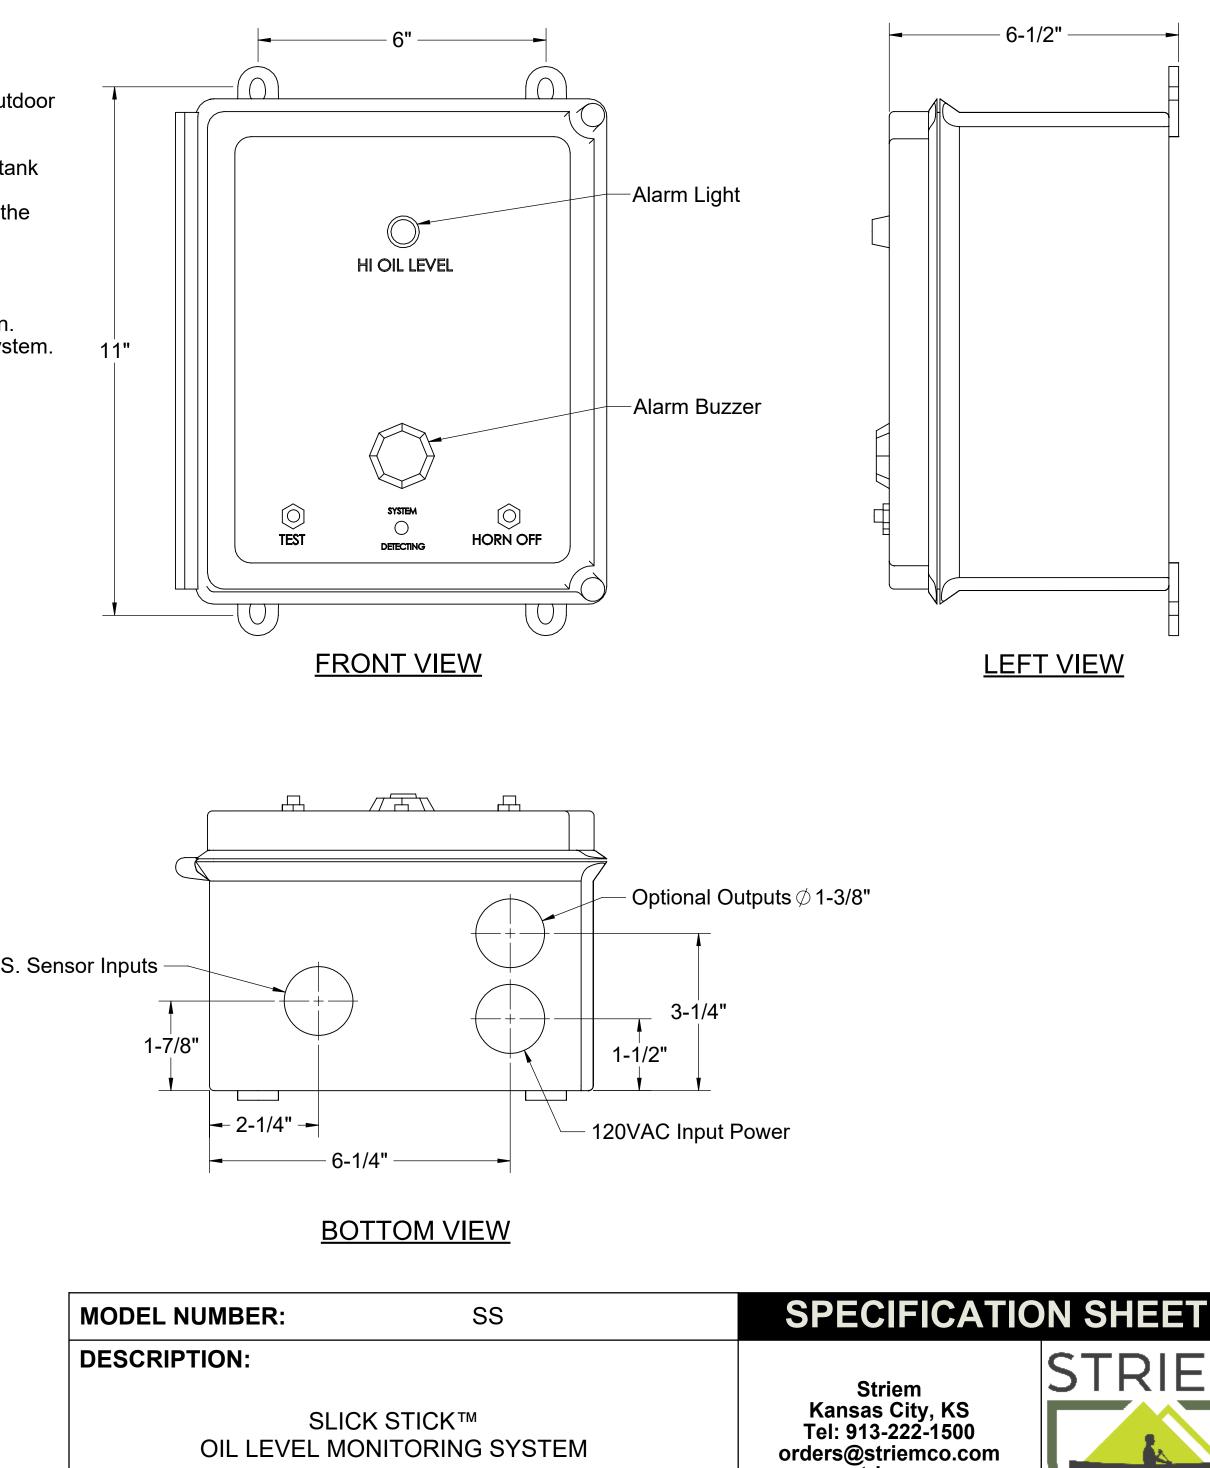

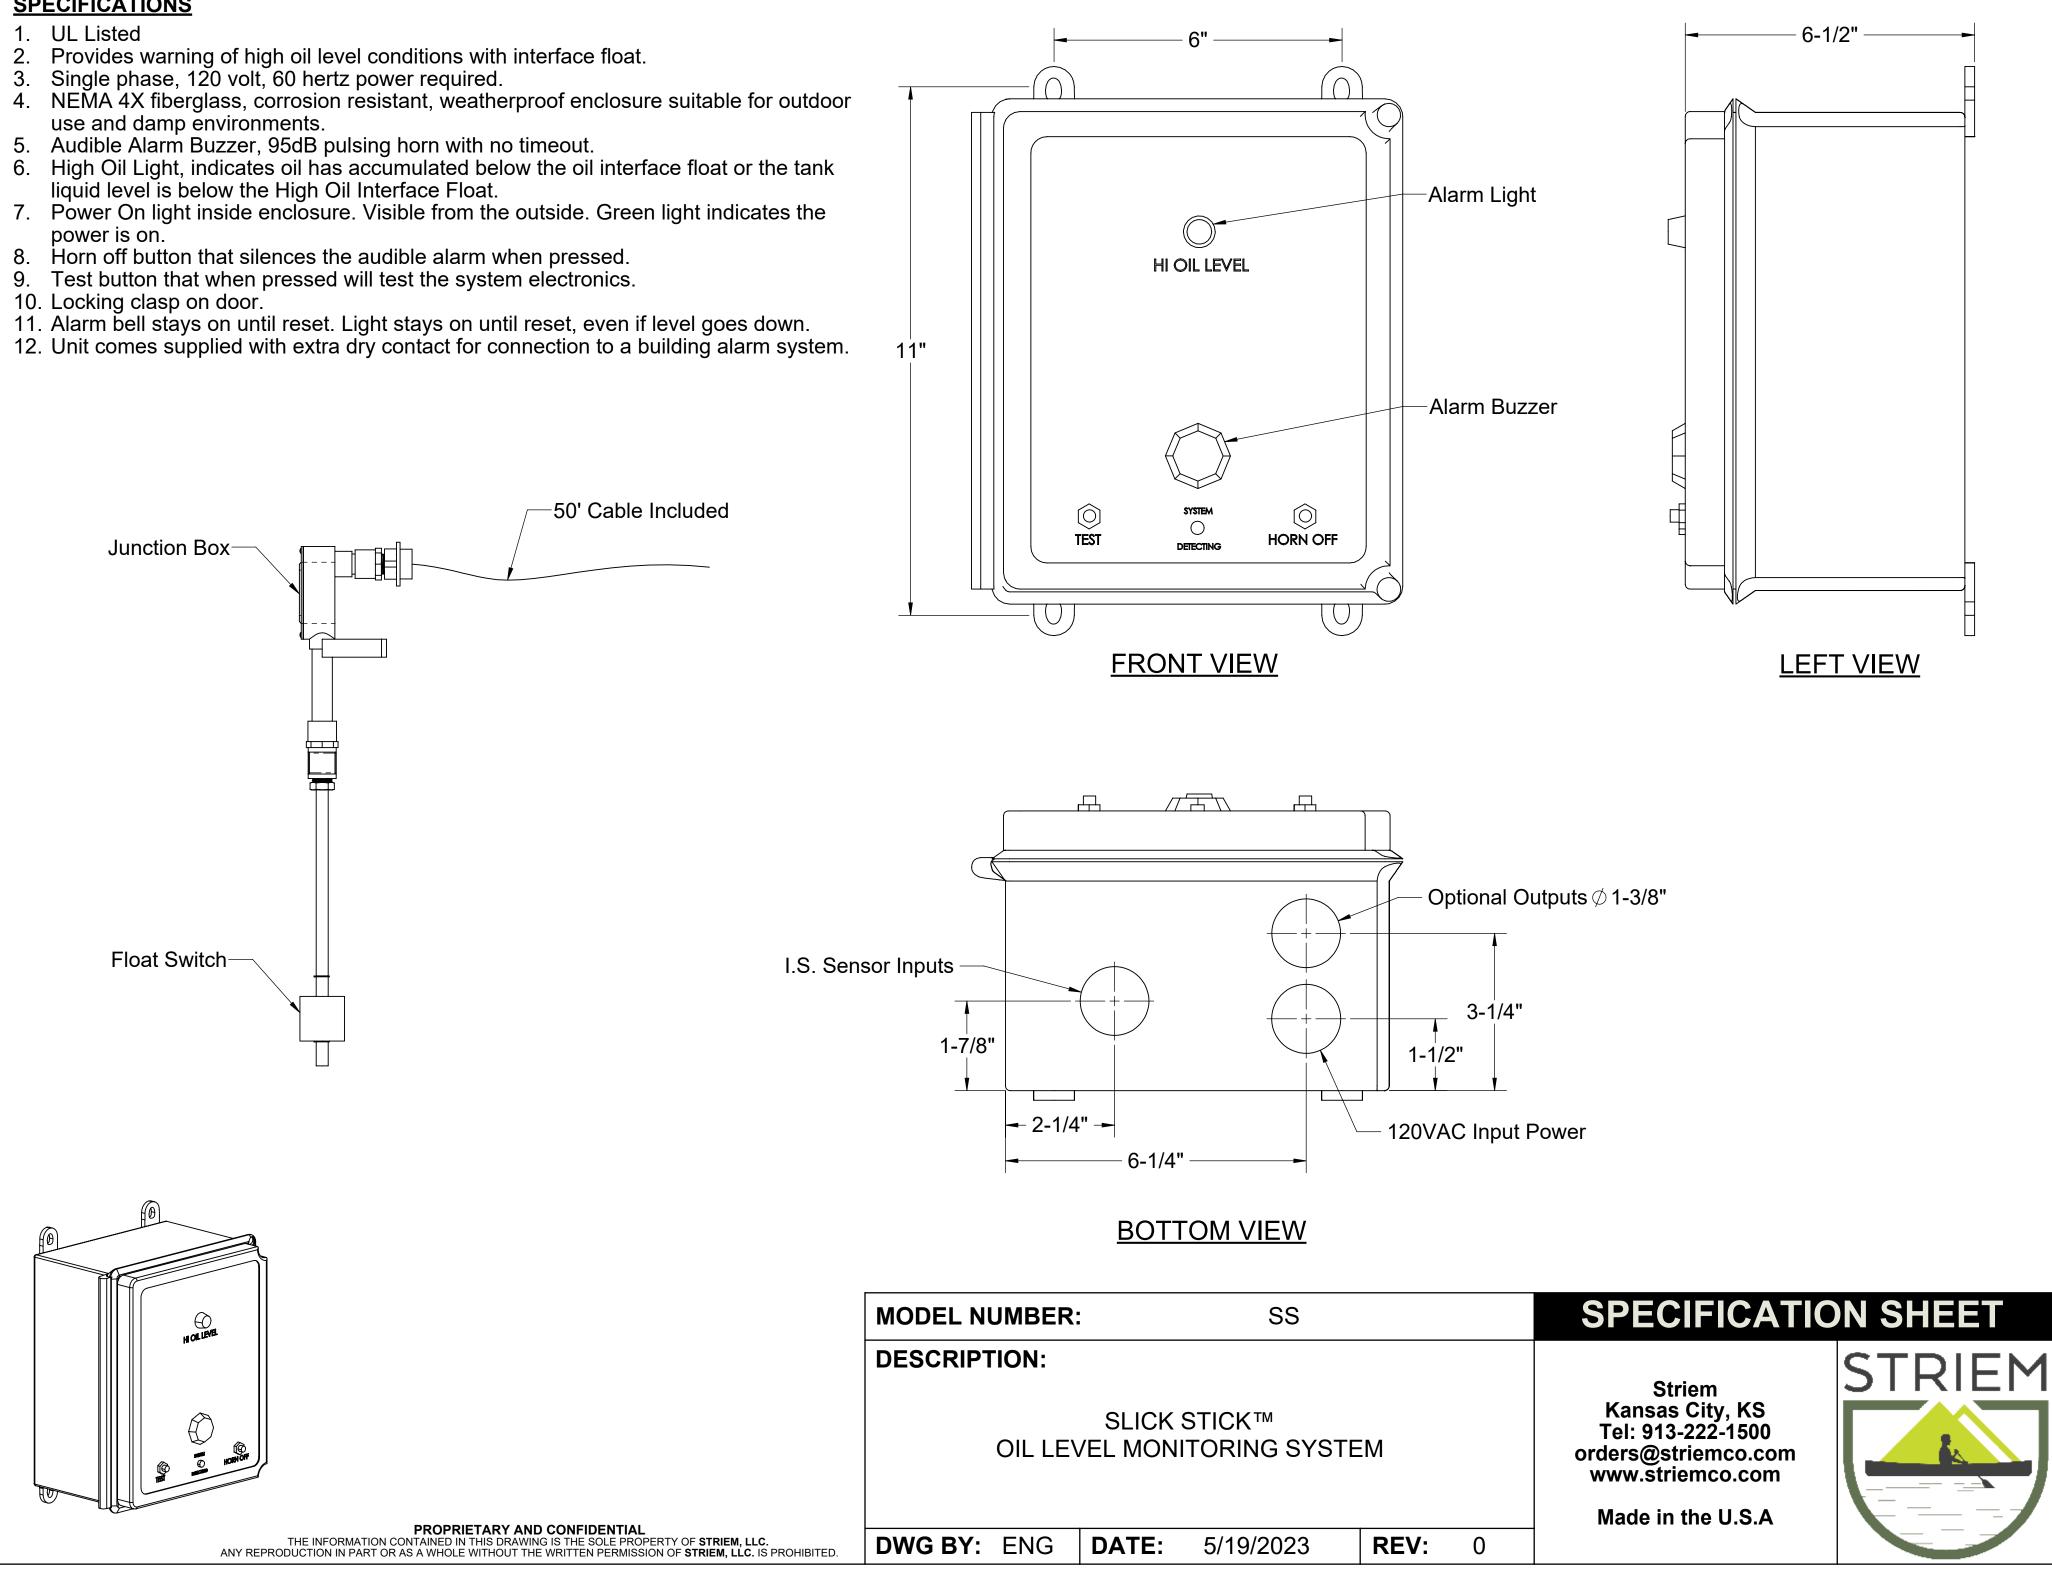

5/19/2023	REV:	0

Installation Guidelines:

- 1. The Slick Stick[™] interface float and alarm panel will ship separately from the tank.
- Install the 1/2" FPT brass coupling to the end of the Slick Stick™ interface float. Thread the 1/2" MPT x socket PVC fitting into the 1/2" FPT brass coupling.
 If the tank is to be installed above grade, or without
- any adjustment to the adapter, install a length of 1/2" sch. 40 PVC pipe between the bottom of the junction box and the top of the 1/2" MPT x socket PVC fitting. Choose the length from Table 1 that corresponds with the unit, and oil capacity to be monitored.
- If the tank is buried, and the adapter will be adjusted 4. upward and/or risers will be used, add the total upward extension dimension to the length determined from Table 1 to determine total length of 1/2" PVC pipe length. For example, assume an OS-75 is being installed below grade and requires 26" of riser extension. Assume you want the control panel to alarm when the oil capacity reaches 70% of the total oil capacity. The length of the 1/2" PVC pipe extension should be 26" (riser depth) + 10" (from Table 1) = 36".
- 5. Run interface float wiring through 1/2" PVC pipe and into the bottom of the juntion box inside the adapter. Connect wiring to alarm panel (see wire diagram).
- 6. Once power is applied, the alarm will sound. Fill the tank to the active water line to silence the alarm.


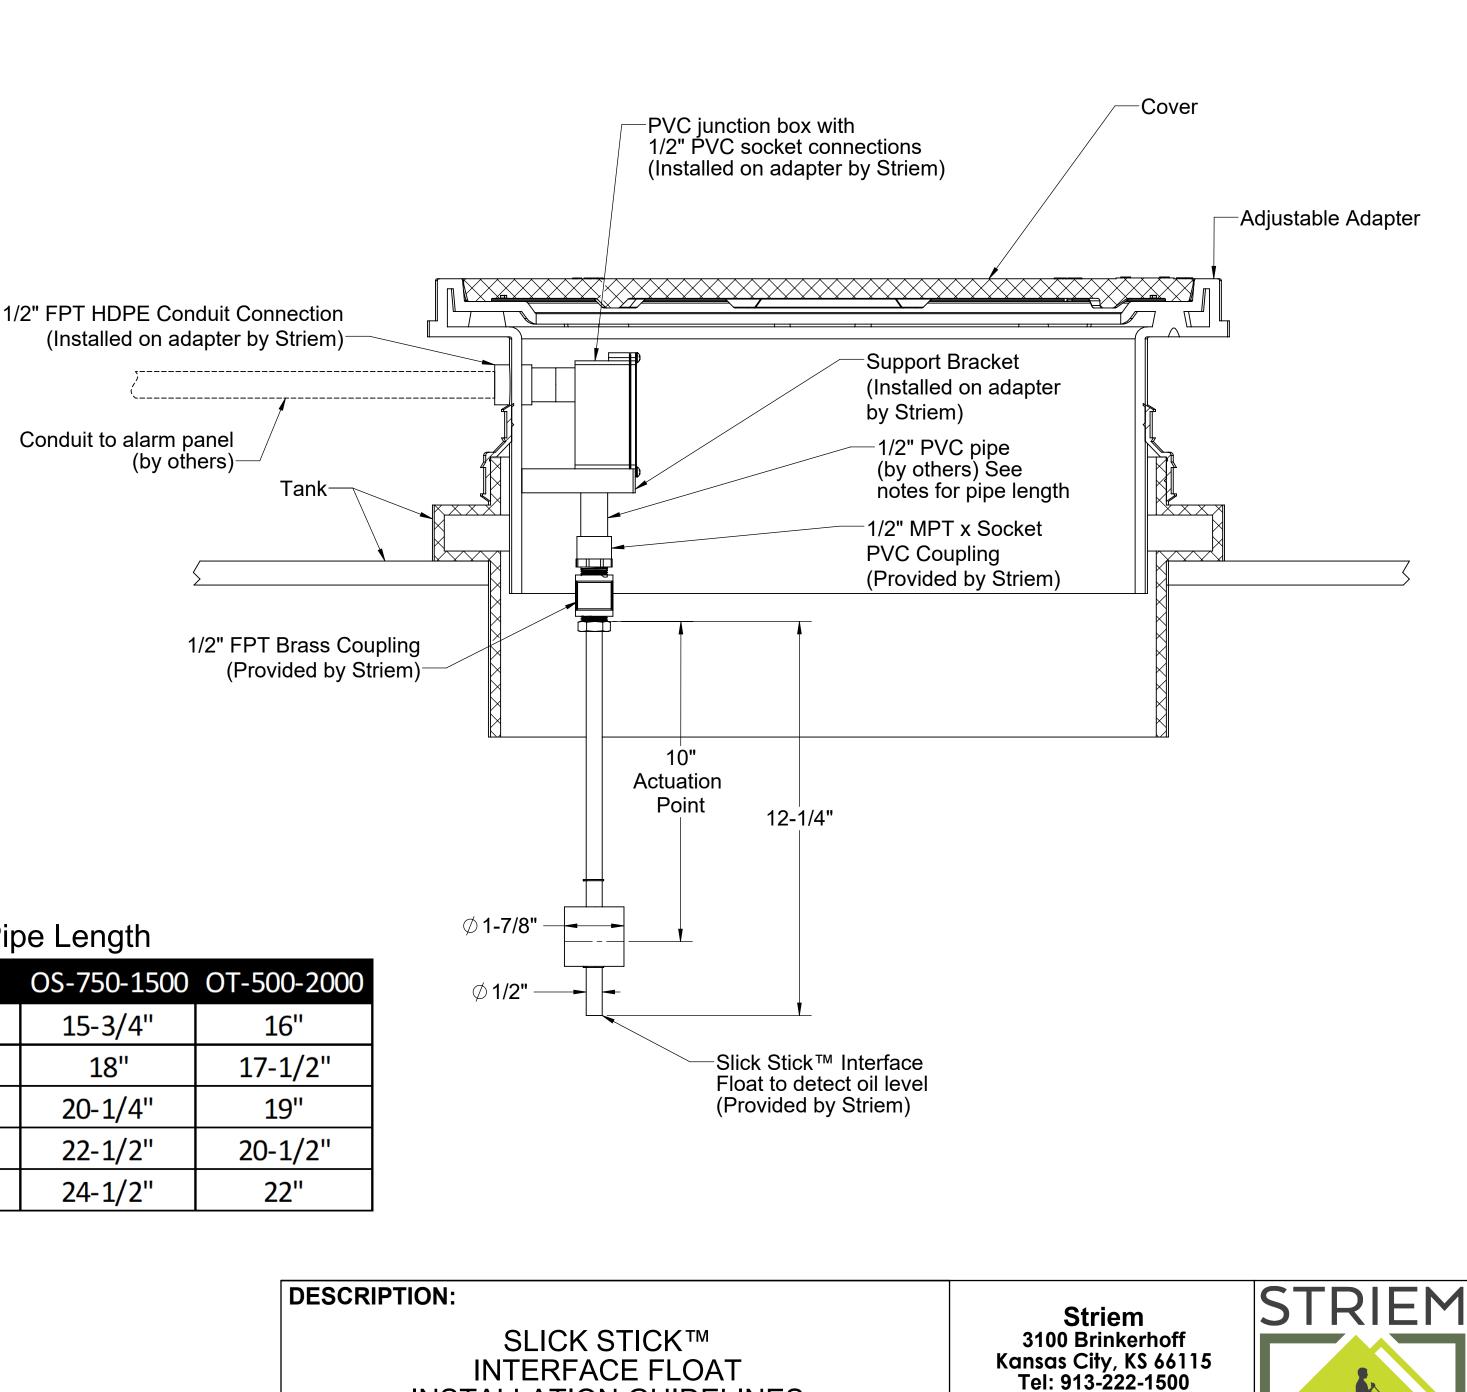


Table 1: 1/2" PVC Pipe Length						
Oil Capacity	OS-50	OS-75	OS-100	OS-750-1500	OT-500-2000	
50%	1-1/2"	6-5/8"	9-5/8"	15-3/4"	16"	
60%	2-3/8"	8-1/4"	11-1/2"	18"	17-1/2"	
70%	3-3/8"	10"	13-1/4"	20-1/4"	19"	
80%	4-3/8"	12"	15"	22-1/2"	20-1/2"	
90%	5-1/2"	13-7/8"	18-3/4"	24-1/2"	22"	

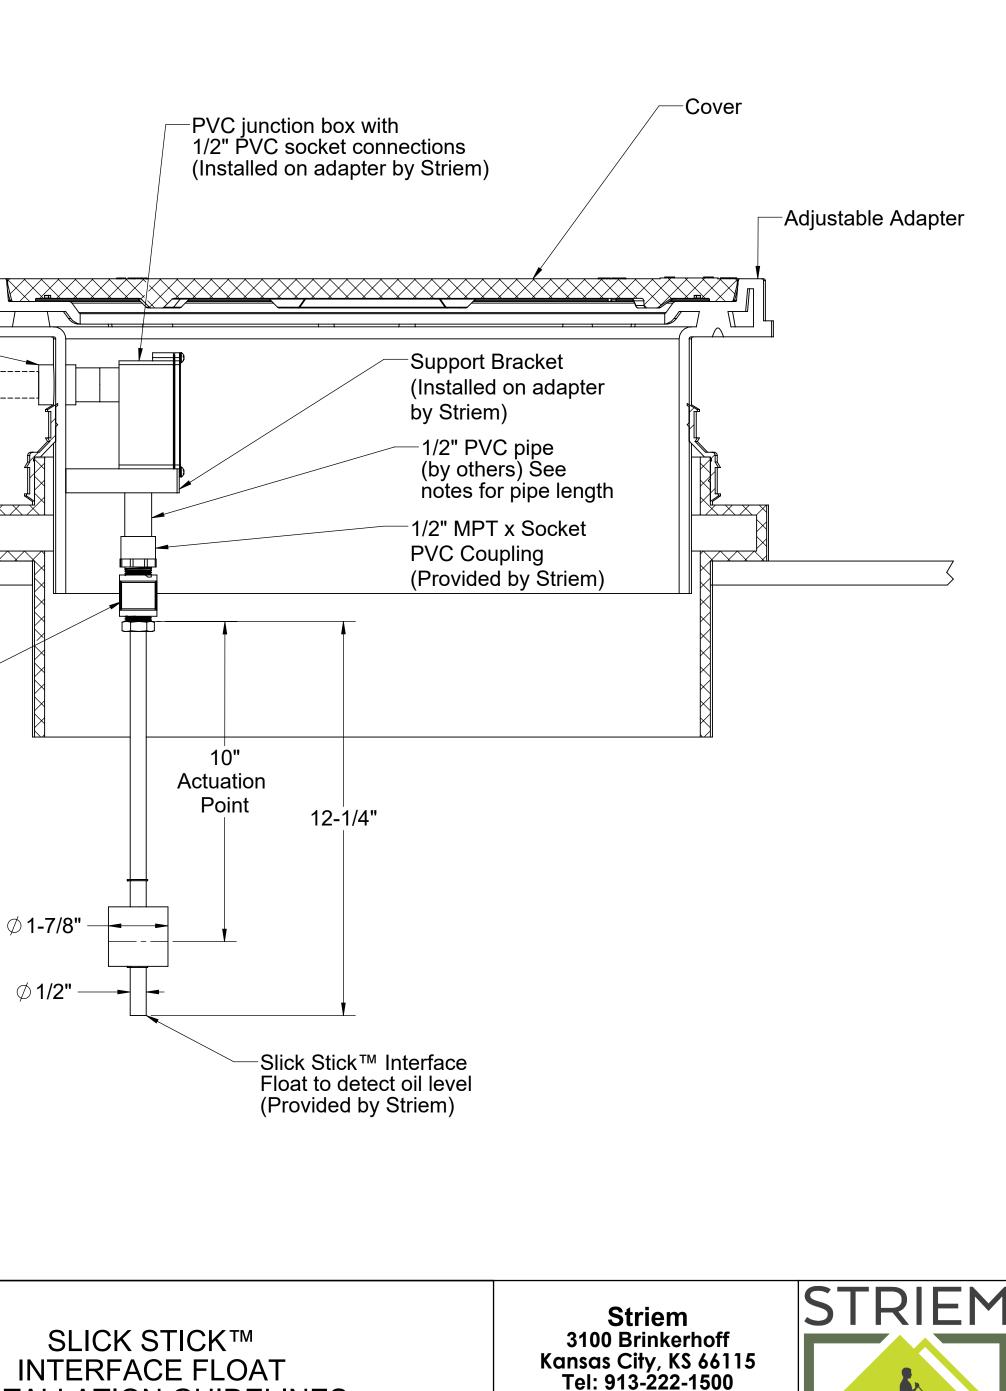

INSTALLATION GUIDELINES

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF **STRIEM**, **LLC**. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF **STRIEM**, **LLC**. IS PROHIBITED.

DATE: 01/14/2022 **REV:** 04 ECO: DWG BY: MJ

orders@striemco.com www.striemco.com

Made in the U.S.A